

Yolin

Electric Bike Display

User's Manual

YL81F

Tianjin Yolin Technology Co. Ltd.

TABLE OF CONTENTS

1. PRODUCT NAME AND MODEL NUMBER	1
2. SPECIFICATION	1
3. APPEARANCE AND SIZE	1
4. FUNCTION OVERVIEW AND FUNCTIONAL AREAS	3
4.1 FUNCTIONAL OVERVIEW	3
4.2 FUNCTIONAL AREAS	3
4.3 BUTTON DEFINITIONS	3
5. ROUTINE OPERATION	3
5.1 POWER ON/OFF	3
5.2 DISPLAY INTERFACE SWITCHING	4
5.3 WALK BOOST MODE	5
5.4 PAS LEVEL SELECTION	6
5.5 BATTERY LEVEL DISPLAY	6
5.6 ERROR CODE DISPLAY	7
6. PERSONALIZED PARAMETER SETTINGS	7
6.1 BACKLIGHT LUMINANCE SETTING	8
6.2 METRIC AND IMPERIAL SETTING	8
6.3 RATED VOLTAGE SETTING	9
6.4 AUTO SLEEP TIME SETTING	9
6.5 PAS LEVEL SETTING	10
6.6 WHEEL DIAMETER SETTING	10
6.7 NUMBER OF SPEED SENSOR MAGNETS SETTING	11
6.8 SPEED LIMIT SETTING	11
6.9 START-UP SETTING	12
6.10 DRIVE MODE SETTING	12
6.11 PEDAL ASSIST SENSITIVITY SETTING	13
6.12 PEDAL ASSIST STRENGTH SETTING	13
6.13 NUMBER OF PEDAL ASSIST SENSOR MAGNETS SETTING	14
6.14 CONTROLLER CURRENT LIMIT SETTING	14
6.15 BATTERY UNDER VOLTAGE VALUE SETTING	15
6.16 ODO RESETS SETTING	15
6.17 CONTROLLER CRUISE CONTROL SETTING	16
6.18 6KM/H WALK BOOST SETTING	16
6.19 POWER-ON PASSWORD SETTING	17
7. SHORTCUT OPERATION	18
7.1 RESTORE FACTORY DEFAULT PARAMETER SETTINGS OPERATION	18
7.2 TRIP ODOMETER RESET OPERATION	18
8. QUALITY ASSURANCE AND WARRANTY	19
8.1 WARRANTY INFO	19

8.2 WARRANTY DOES NOT COVER	19
9. WIRE CONNECTION DIAGRAM	19
9.1 STANDARD WIRE CONNECTION SEQUENCE	19
10. PRECAUTIONS	19
SCHEDULE 1: ERROR CODE DEFINITION	20

1. Product Name and Model Number

Smart LCD display for electric bicycle; Model: YL81F.

2. Specification

- 48V power supply
- Display rated current 15mA
- Display maximum current 30mA
- Shutdown leakage current <1uA
- Supplied current to the controller 50mA
- Operating temperature -10~60°C
- Storage temperature -30~70°C

3. Appearance and Size



Figure 3-1 Physical picture of the YL81F display



Figure 3-2 Physical picture of the K6 control button

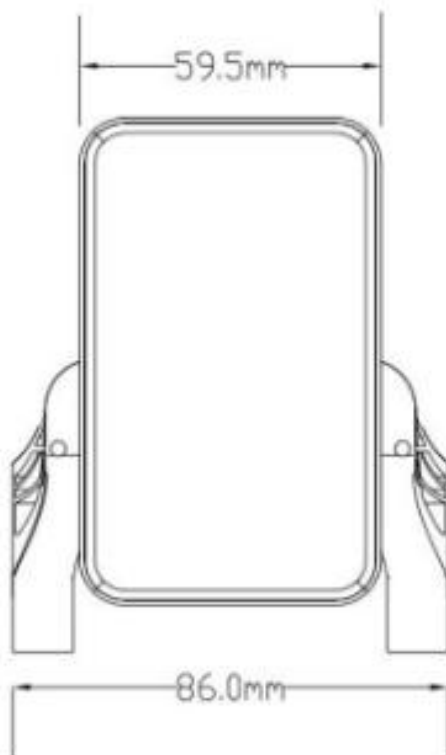


Figure 3-3 YL-81F Front View Dimension

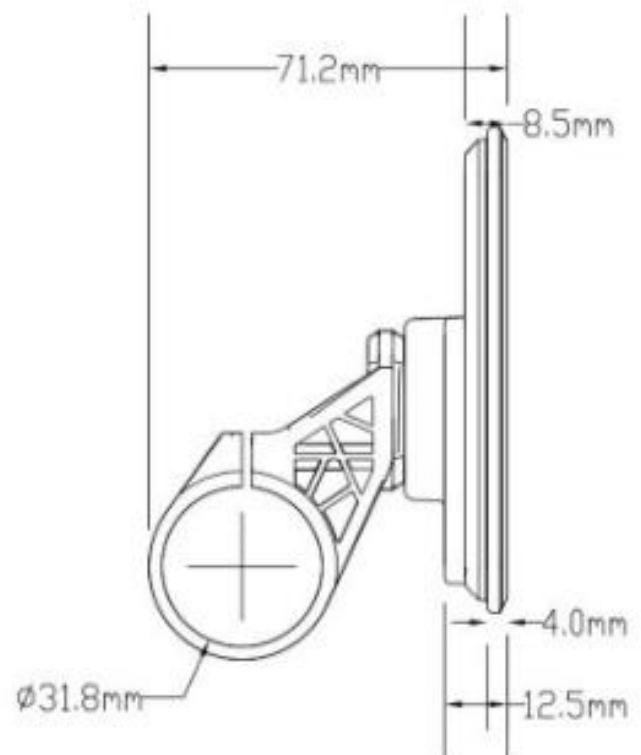


Figure 3-4 YL-81F Side View Dimension

4. Function overview and Functional areas

4.1 Functional overview

The YL81F display offers a variety of features to suit your riding needs, including:

- Battery level indicator
- Pedal assist (PAS) level indicator
- Speed (current speed, maximum speed, average speed)
- Mileage display (single and total mileage)
- Walk boost mode
- Error code indicator
- Cruise control indicator (optional)
- Personalized parameter settings (e.g. wheel diameter, speed limit, etc.).
- Factory default parameter recovery function

4.2 Functional areas

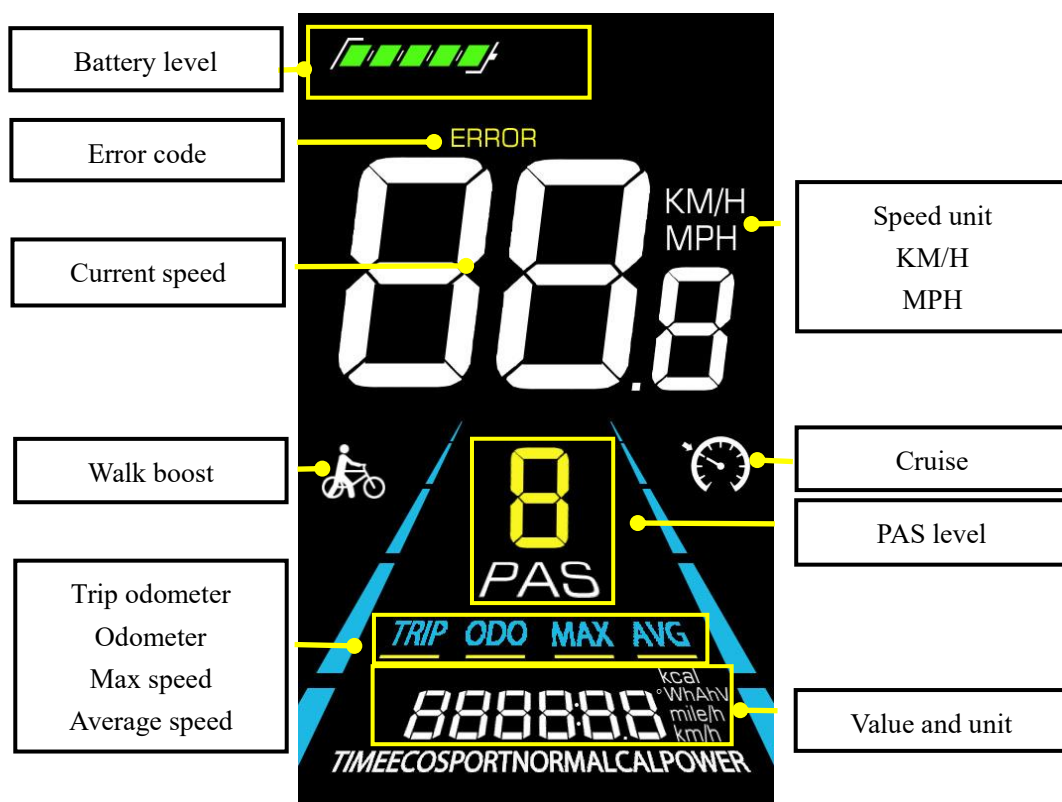


Figure 4-1 YL81F functional area distribution interface

4.3 Button definitions

The YL81F display is equipped with five buttons on the corresponding operating unit: power on/off , plus , minus , , and toggle .

5. Routine operation

5.1 Power on/off

Long press  to power on/off the display. When the display is off, it will not use the battery power and the leakage current is less than 1uA.

 The display will automatically shut off if it is not used for more than 10 minutes.

5.2 Display interface switching

When the display is powered on, it will show the Current Speed (km/h) and Trip Odometer (km) by default. Short press **i** to switched cyclically between Trip Odometer(km), Odometer (km), Maximum Speed (km/h), and Average Speed (km/h).

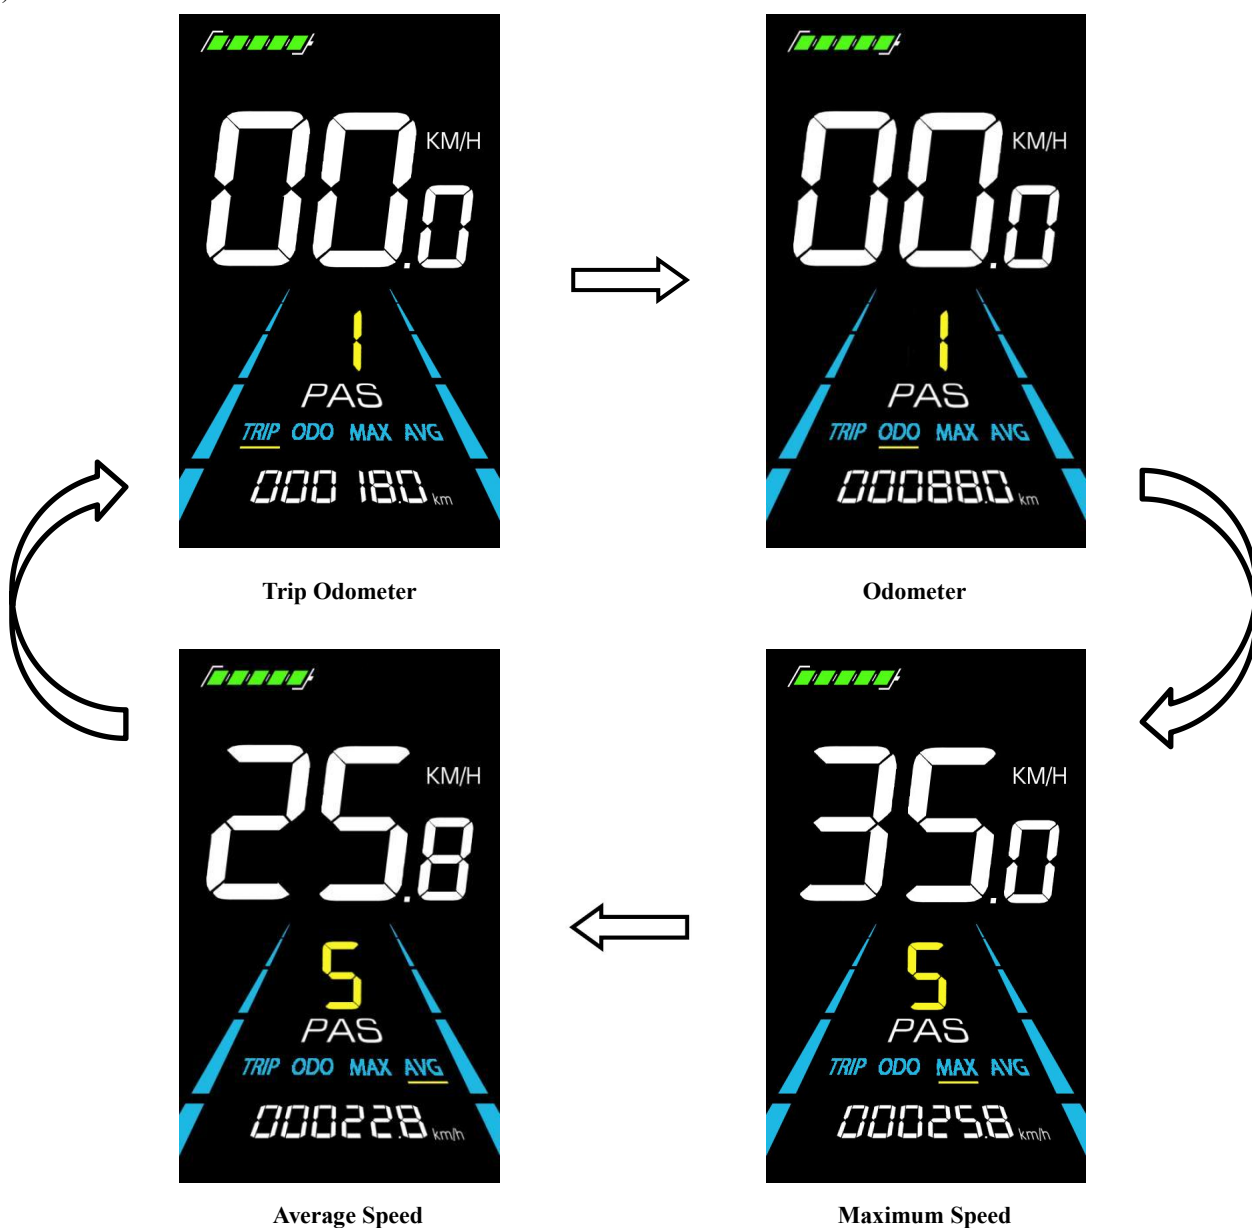


Figure 5-1 Display interface switching

5.3 Walk boost mode

Long press and hold , the electric bicycle enters the walk boost mode. Your e-bike will run at the constant speed at the promoted speed and the display shows . Release  to stop the power output immediately and restore to the state before walk boost.



Figure 5-2 Helping to implement the display screen

 The walk boost mode can only be used when pushing the electric bicycle, please do not use it while riding.

5.4 PAS level selection

Press **+** / **-** to switch PAS level of electric bicycle, thus changing the motor output power. (The following pictures are only for illustration of different speeds in different gears. The specific speed is subject to the actual product)

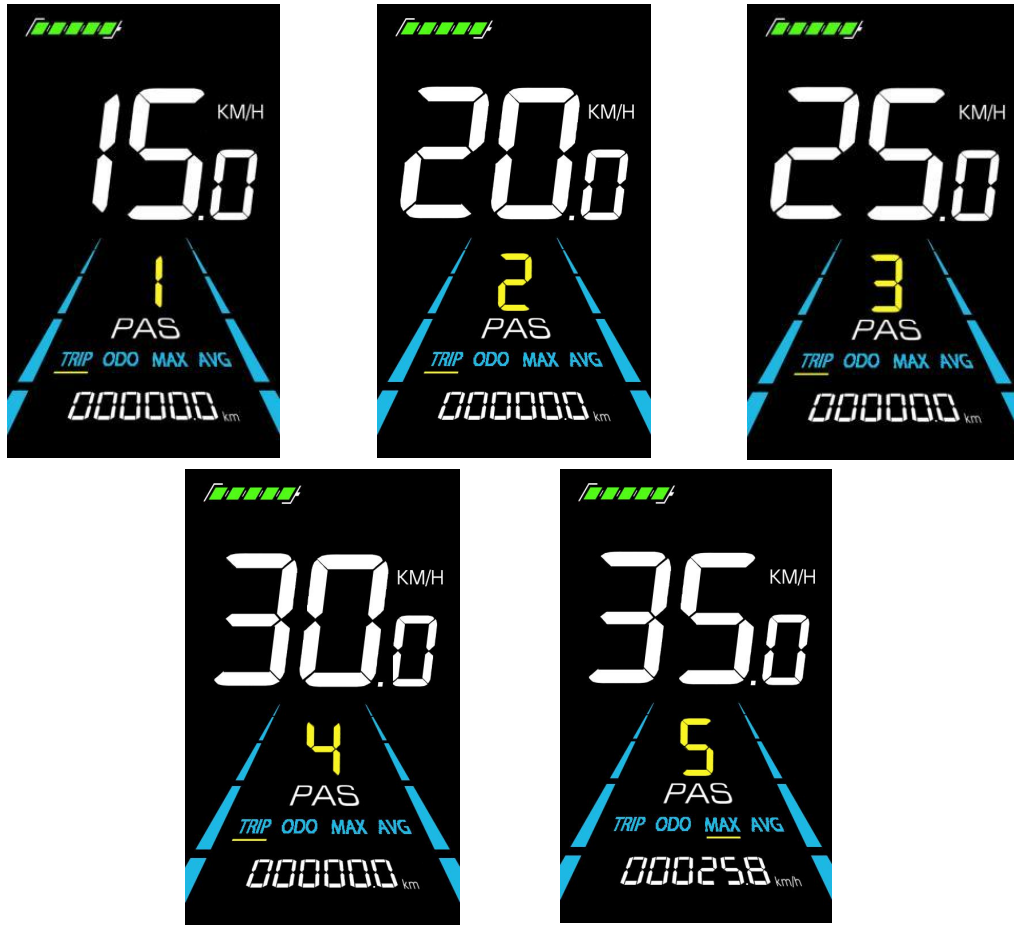


Figure 5-3 PAS level display interface

5.5 Battery level display

The Battery level is shown as 5 bars. When the battery is full charged, all of the 5 bars lighten up. When the battery is fully depleted, the bar will begin to flash, warning the user to charge the battery as soon as possible.

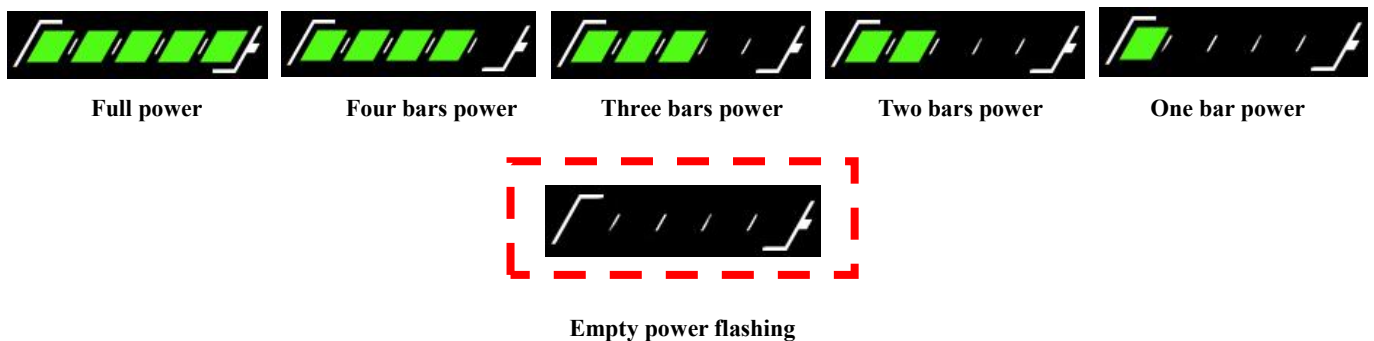


Figure 5-4 Battery level display interface

5.6 Error code display

If there is a fault occurs in the electronic system of the electric bicycle, the display will automatically show an error code, see **Schedule 1** for a detailed definition of the error code.

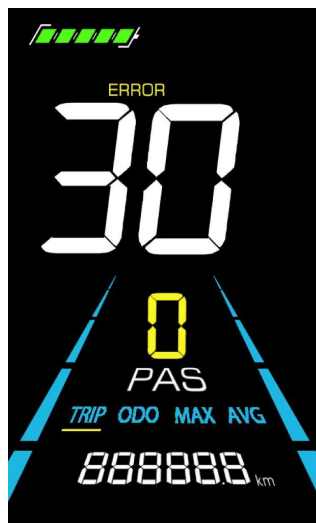


Figure 5-5 Error code display

⚠ When the error code appears on the display, please troubleshoot the problem in time, the electric bicycle will not be able to drive normally after the problem occurs.

6. Personalized parameter settings

⚠ Each setting needs to be done with the bicycle stationary.

The personalized parameter setting procedure is as follows:

When the display is ON and the speed shows 0,

(1) Press and hold **+** **-** simultaneously for more than 2 seconds to enter the personalized parameter setting interface.

(2) Press **+** / **-** to toggle between the personalized parameter setting interface, and press **i** to enter the parameter changing state.

(3) Press **+** / **-** to select the parameter, long press **+** for addition operation, long press **-** for subtraction operation.

(4) Press **i** to save the parameter settings and return to the personalized parameter setting interface.

(5) Long press **i** to save the parameter settings and exit the personalized parameter setting interface.

The following options are available on the personalized parameter setting interface:

6.1 Backlight luminance setting

01P is the backlight luminance setting. Parameters 01, 02 and 03 are available, which represent the backlight luminance, 01 for the minimum luminance, 02 for the standard luminance and 03 for the maximum luminance.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

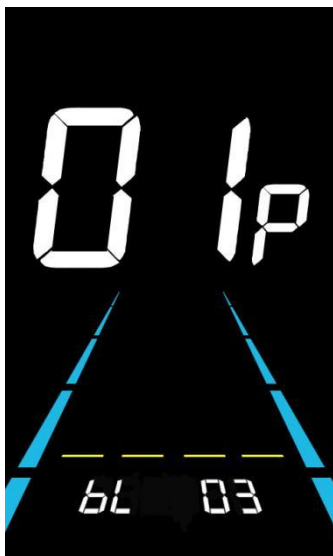


Figure 6-1 Backlight luminance setting interface

6.2 Metric and Imperial setting

02P is the metric and imperial setting, 00 for metric and 01 for imperial.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

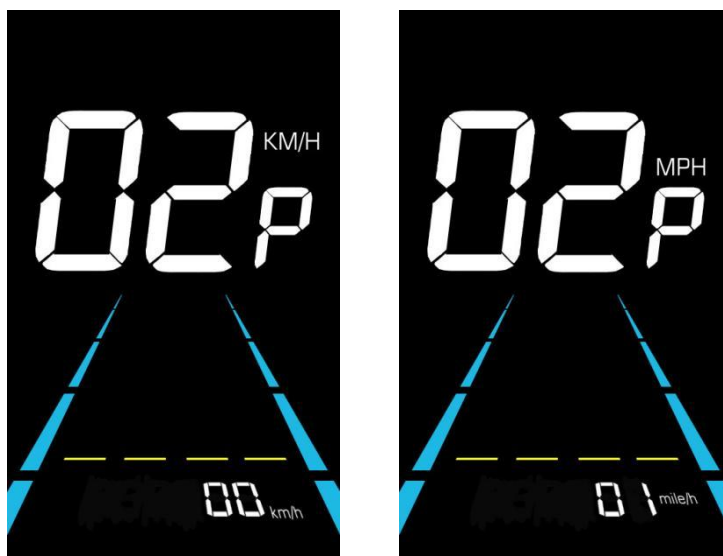


Figure 6-2 Metric and Imperial units setting interface

6.3 Rated voltage setting

03P is the rated voltage setting. The available rated voltage range is: 36V, 48V, 60V.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-3 Rated voltage setting interface

6.4 Auto sleep time setting

04P is the auto sleep time setting. To save the battery power and reach higher range, this display will be turned off after it has not been used for a time. The adjustable range is: 00~60min, 00 means no auto shutdown. The factory default setting is 10 minutes.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-4 Auto sleep time setting interface

6.5 PAS level setting

05P is the Pedal assist level setting. The available PAS level settings are: 0~3, 1~3, 0~5, 1~5.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-5 PAS level setting interface

6.6 Wheel diameter setting

06P is the wheel diameter setting. The adjustable wheel diameter range is: 8~32inch.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-6 Wheel diameter setting interface

6.7 Number of speed sensor magnets setting

07P is the speed sensor magnet number setting. The adjustable speed sensor magnet number range is: 1 ~ 255 pcs.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-7 Number of speed sensor magnets setting interface

6.8 Speed limit setting

08P is the speed limit setting. The adjustable speed limit range is: 25km/h or 45km/h. (The maximum adjustable speed limit varies by different protocols).

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

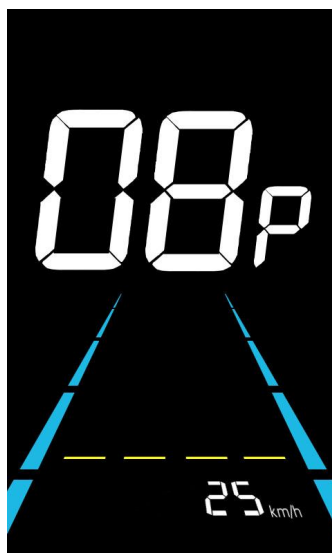


Figure 6-8 Speed limit setting interface

6.9 Start-up setting

09P is the start-up setting. The display can choose the following start modes: 00→zero start, 01→non-zero start.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-9 Start-up setting interface

6.10 Drive mode setting

10P is the drive mode setting. The available drive modes are: 00→Pedal assist only, 01→Electric only, 02→Both Pedal assist and electric.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

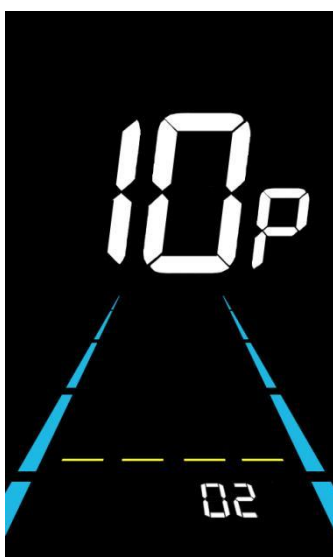


Figure 6-10 Drive mode setting interface

6.11 Pedal assist sensitivity setting

11P is the pedal assist sensitivity setting. When set to higher numbers, it will take more crank rotations to activate the motor. On lower numbers, it will take little crank rotation to activate the motor. The adjustable range is: 1~24.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

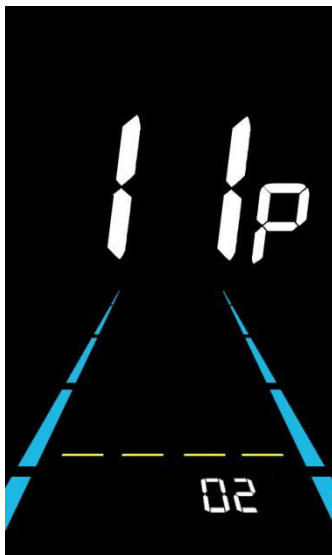


Figure 6-11 Pedal assist sensitivity setting interface

6.12 Pedal assist strength setting

12P is the Pedal assist strength setting. The Pedal assist strength is the relative strength of the PWM signal from the controller when start to activate pedal assist. The adjustable range is 0 ~ 5. 0 is the weakest strength and 5 is the strongest.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-12 Pedal assist strength setting interface

6.13 Number of pedal assist sensor magnets setting

13P is the number of pedal assist sensor magnets setting. The adjustable range: 5~12 pcs.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-13 Number of pedal assist sensor magnets setting interface

6.14 Controller current limit setting

14P is the controller current limit setting. The adjustable range is: 1~50A.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-14 Controller current limit setting interface

6.15 Battery under voltage value setting

15P is the battery under voltage setting. The value can be adjusted based on the current rated voltage.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

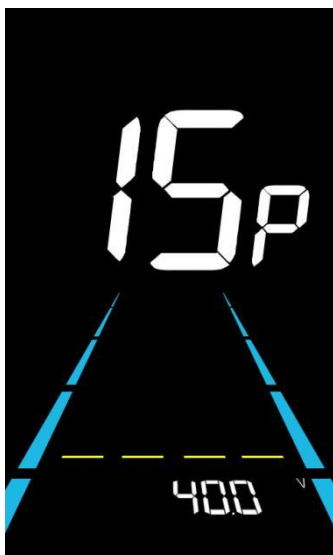


Figure 6-15 Battery under voltage value setting interface

6.16 ODO resets setting

16P is the ODO resets setting. The display can choose the following: 00→non reset, 01→reset.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-16 ODO resets setting interface

6.17 Controller cruise control setting

17P is the controller cruise control setting. The display can choose the following: 00→non enable, 01→enable.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

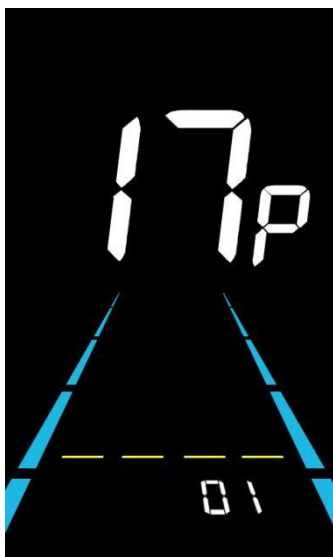


Figure 6-17 Controller cruise control setting interface

6.18 6km/h walk boost setting

18P is the 6km/h walk boost setting. The display can choose the following: 00→turn off walk boost function, 01→turn on walk boost function.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-18 6km/h walk boost setting interface

6.19 Power-on password setting

19P is the power-on password setting. The power-on password is not activated by default but users can activate it from setting PSd-y. The factory default password is 1212. **Users can set other four-digit password. ⚠ Please keep the password in mind after changing it, otherwise you will not be able to use the display!**

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter. PSd-y means the power-on password is activated while PSd-n is off. Press **i** to confirm the mode and enter the state of setting the four digits power-on password or exit to the personalized parameter setting interface.

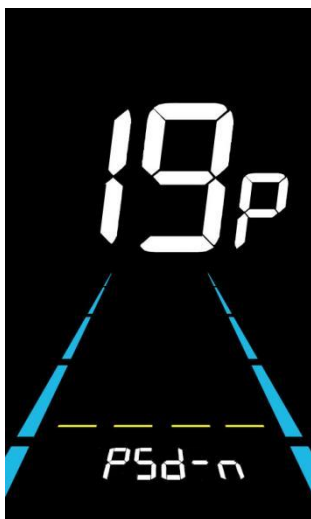


Figure 6-19 Power-on password off interface



Figure 6-20 Power-on password activated interface

In the password setting mode, the adjustable digit will flash. Press the **+** / **-** to select the parameter and press **i** to save the numbers and go to the next digit setting. Press **i** to save the parameter setting and return to the personalized parameter setting interface after finish setting the four digits in turn.



Figure 6-21 Power-on password setting interface

7. Shortcut operation

7.1 Restore factory default parameter settings operation

dEF is the restore factory default parameter settings. dEF-Y is to restore default settings, and dEF-N is not to restore.

Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to enter the restore factory default setting interface. Pressing  /  to toggle to dEF-Y. Then after pressing  to confirm, the display will show dEF-0 for a few seconds and then automatically start to restore the factory default settings. The display will automatically exit to setting interface after the restoration.



Figure 7-1 Restore factory default parameter settings interface

7.2 Trip odometer reset operation

The display can record trip odometer and odometer. Trip odometer is not automatically reset after turning off. The trip odometer needs to be reset manually.

Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to reset the trip odometer. The main interface will flash during the reset process.

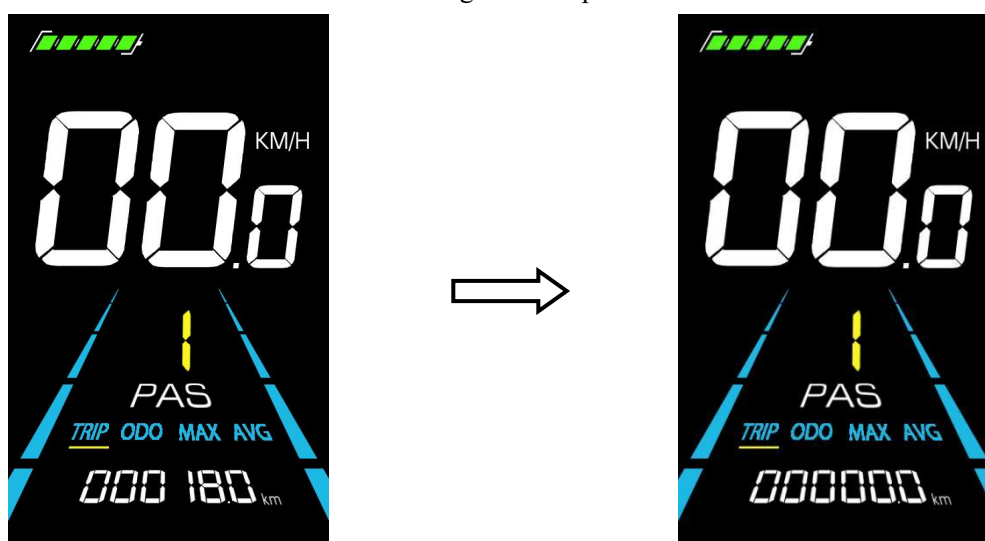


Figure 7-2 Trip Odometer reset interface

8. Quality Assurance and Warranty

8.1 Warranty info

● Yolin will offer a limited warranty for any failure caused by the product defects under normal use during the warranty period.


- The product is warranted for 12 months from the date out of factory.

8.2 Warranty does not cover

- The shell is opened.
- The connector is damaged.
- Scratches on the appearance after the product is out of factory.
- Scratched or broken wires
- Failure or damage caused by force majeure (e.g. fire, earthquake, etc.) or natural disaster (e.g. lightning strike, etc.)
- Out of warranty period.

9. Wire connection diagram

9.1 Standard wire connection sequence

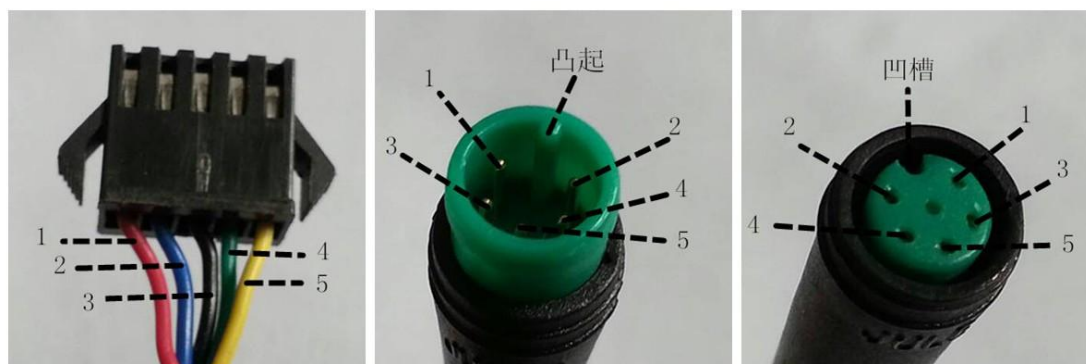

Controller connector

Display connector (Female terminal) Display connector (Male terminal)

Figure 9-1 Wire Connection Diagram

Table 9-1 Standard connector wire sequence table

Standard Wire Sequence	Standard wire color	Function
1	Red (VCC)	Display power wire
2	Blue (Kp)	Controller power wire
3	Black (GND)	Display ground wire
4	Green (RX)	Display data reception wire
5	Yellow (TX)	Display data transmit wire

■ Some models are equipped with waterproof connectors and the color inside wires can not be seen.

10. Precautions

Pay attention to all the general operating when using the products and do not plug and unplug the display while it is powered on.

- ◆ Avoid bumping the display as much as possible.
- ◆ Please do not change the parameter settings at will, otherwise normal riding cannot be guaranteed.
- ◆ If display does not work properly, please send it to the repair center as soon as possible.
- ◆ There may be differences between the physical products and this manual due to normal upgrade. Please refer to the physical products.

Schedule 1: Error Code Definition

YL-02 Error codes				
Error code	Definition		Error code	Definition
E001	Controller failure		E004	Throttle failure
E002	Communication failure		E005	Brake failure
E003	Hall failure		E006	Motor phase failure

Tel: 022-86838795

Fax: 022-86838795

Email: store@yolintech.com

Website: www.yolintech.com

Address: Plant 52-1, Yougu Xinke Park, East of Jingfu Road, Pharmaceuticals and Medical Equipment Industrial Park, Beichen Economic Development Zone, Beichen District, Tianjin